


MEET YOUR GOPAL

LET'S UNBOX IT

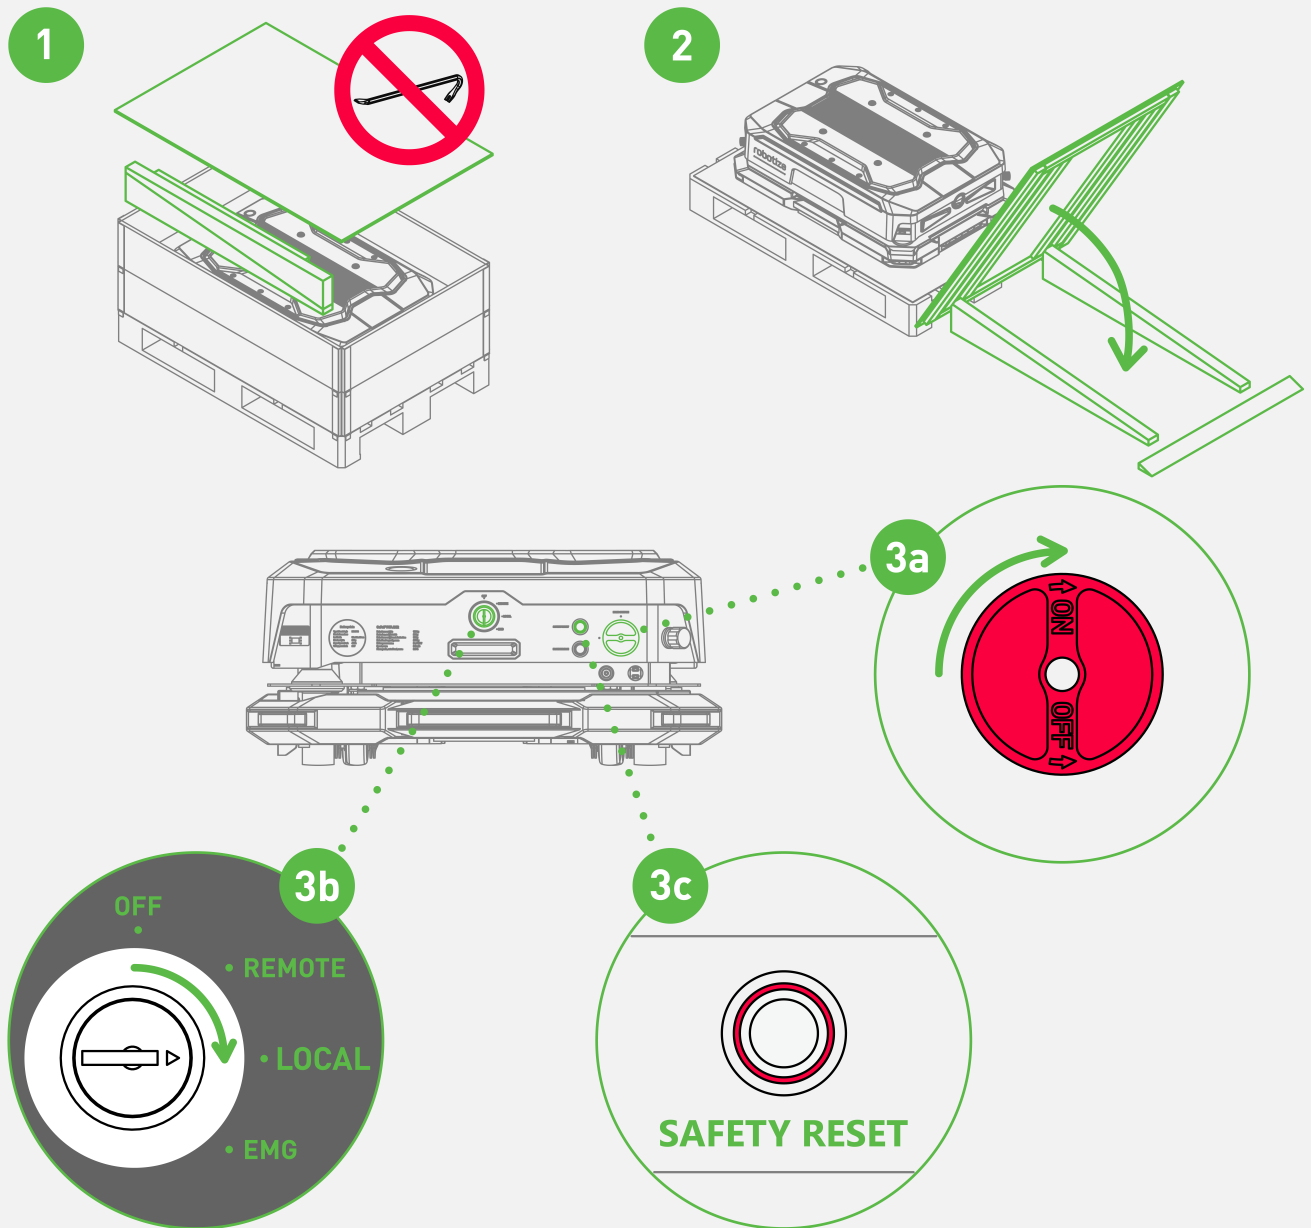

STORING YOUR GOPAL?

The battery of your GoPal will loose charge during storage. Therefore, to prevent damage, it is **required to charge it for 2 hours at least every second month**. Failing to do so will be a **void of battery warranty**.



IN NEED OF A MANUAL?

Safety documents & manuals for your GoPal can be accessed at:
support.robotize.com



