

Konfiguration - Programm-Task-Ebene
- Es ist nur 1 Programm möglich.

Configuration - Program-Task-Level
- Only 1 program task is possible.



<http://micon-l.de>
<https://barth-elektronik.com>


Bitte beachten !
Der COM-Port wird global über die "StartMe.exe"
eingestellt und gilt gleichzeitig auch für andere
Steuerungen, die diese zentrale Konfiguration nutzen.

Please note !
The COM port is global via the "StartMe.exe" set
and is also valid for other controllers using that
global configuration.


Änderungsprotokoll:
<http://micon-l.de/aenderungsprotokoll-micon-l.html>

Change log:
<http://micon-l.de/change-log-micon-l.html>

Robotize ApS Support@robotize.com dk-2800 Kongens Lyngby Phone: +45 31 16 80 00 Fax: +45 31 16 80 00		
Project file: ...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL		
Macro: &MAIN		Version: 1.0
Date: 01 July 2024	Signed: SvendStave	Inspected:

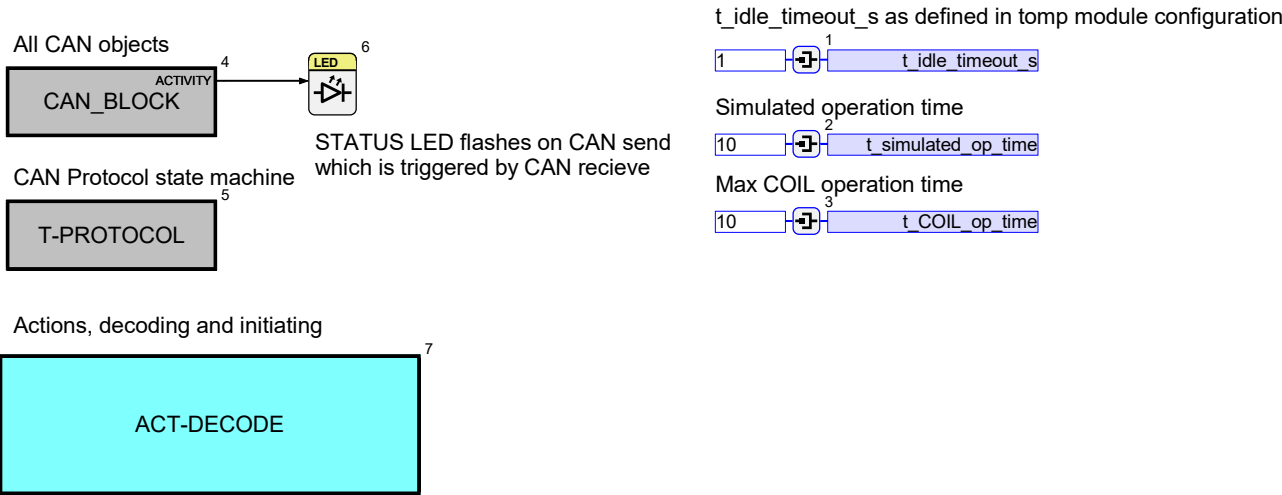


CAN BLOCK

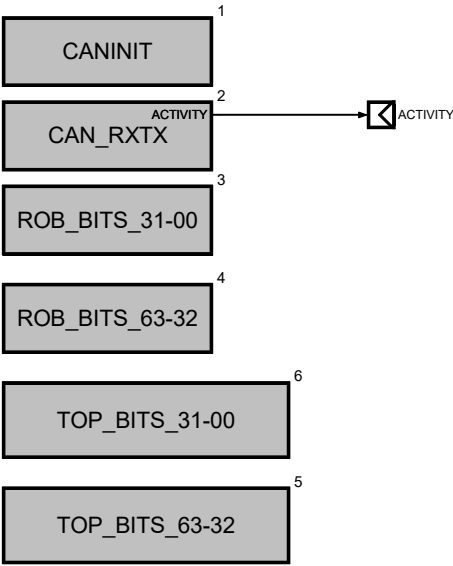


Robotize ApS Support@robotize.com dk-2800 Kongens Lyngby Phone: +45 31 16 80 00 Fax: +45 31 16 80 00		
Project file: ...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL		
Macro: CAN_BLOCK		Version: 1.0
Date: 01 July 2024	Signed: SvendStave	Inspected:

CAN INIT

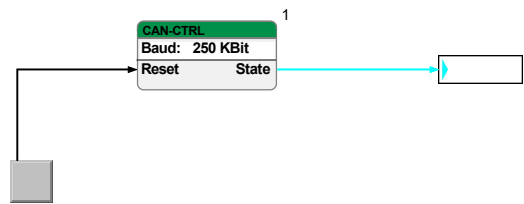

Robotize ApS Support@robotize.com dk-2800 Kongens Lyngby Phone: +45 31 16 80 00 Fax: +45 31 16 80 00		
Project file: ...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL		
Macro: CANINIT		Version: 1.0
Date: 01 July 2024	Signed: SvendStave	Inspected:

CAN RX TX

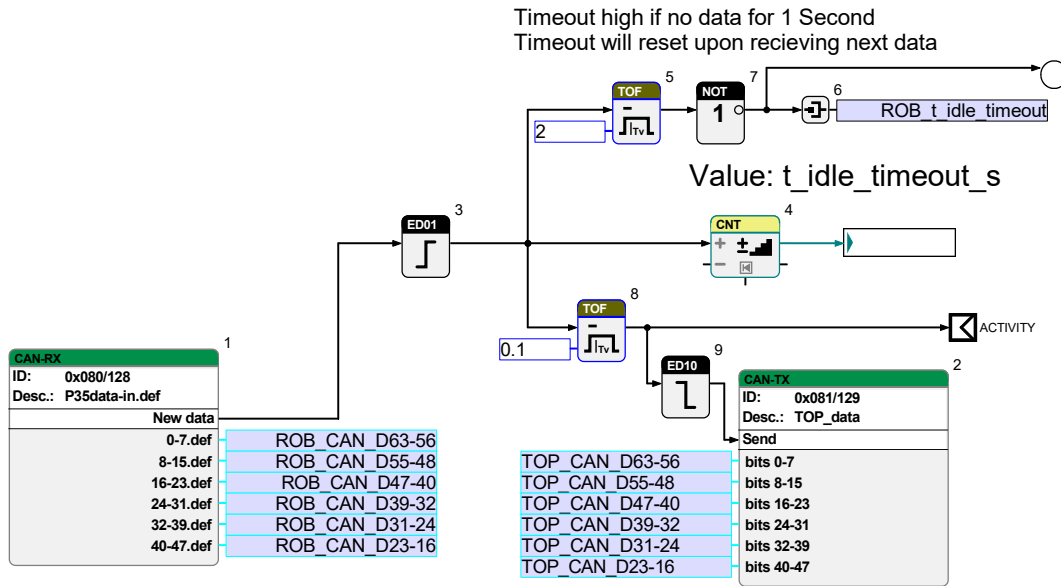

Robotize ApS
Support@robotize.com
dk-2800 Kongens Lyngby
Phone: +45 31 16 80 00
Fax: +45 31 16 80 00

Project file:
...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL

Macro:
CAN_RXTX


Version:
1.0

Date: 01 July 2024

Signed: SvendStave


Inspected:

ROB CAN BITS 0 - 31

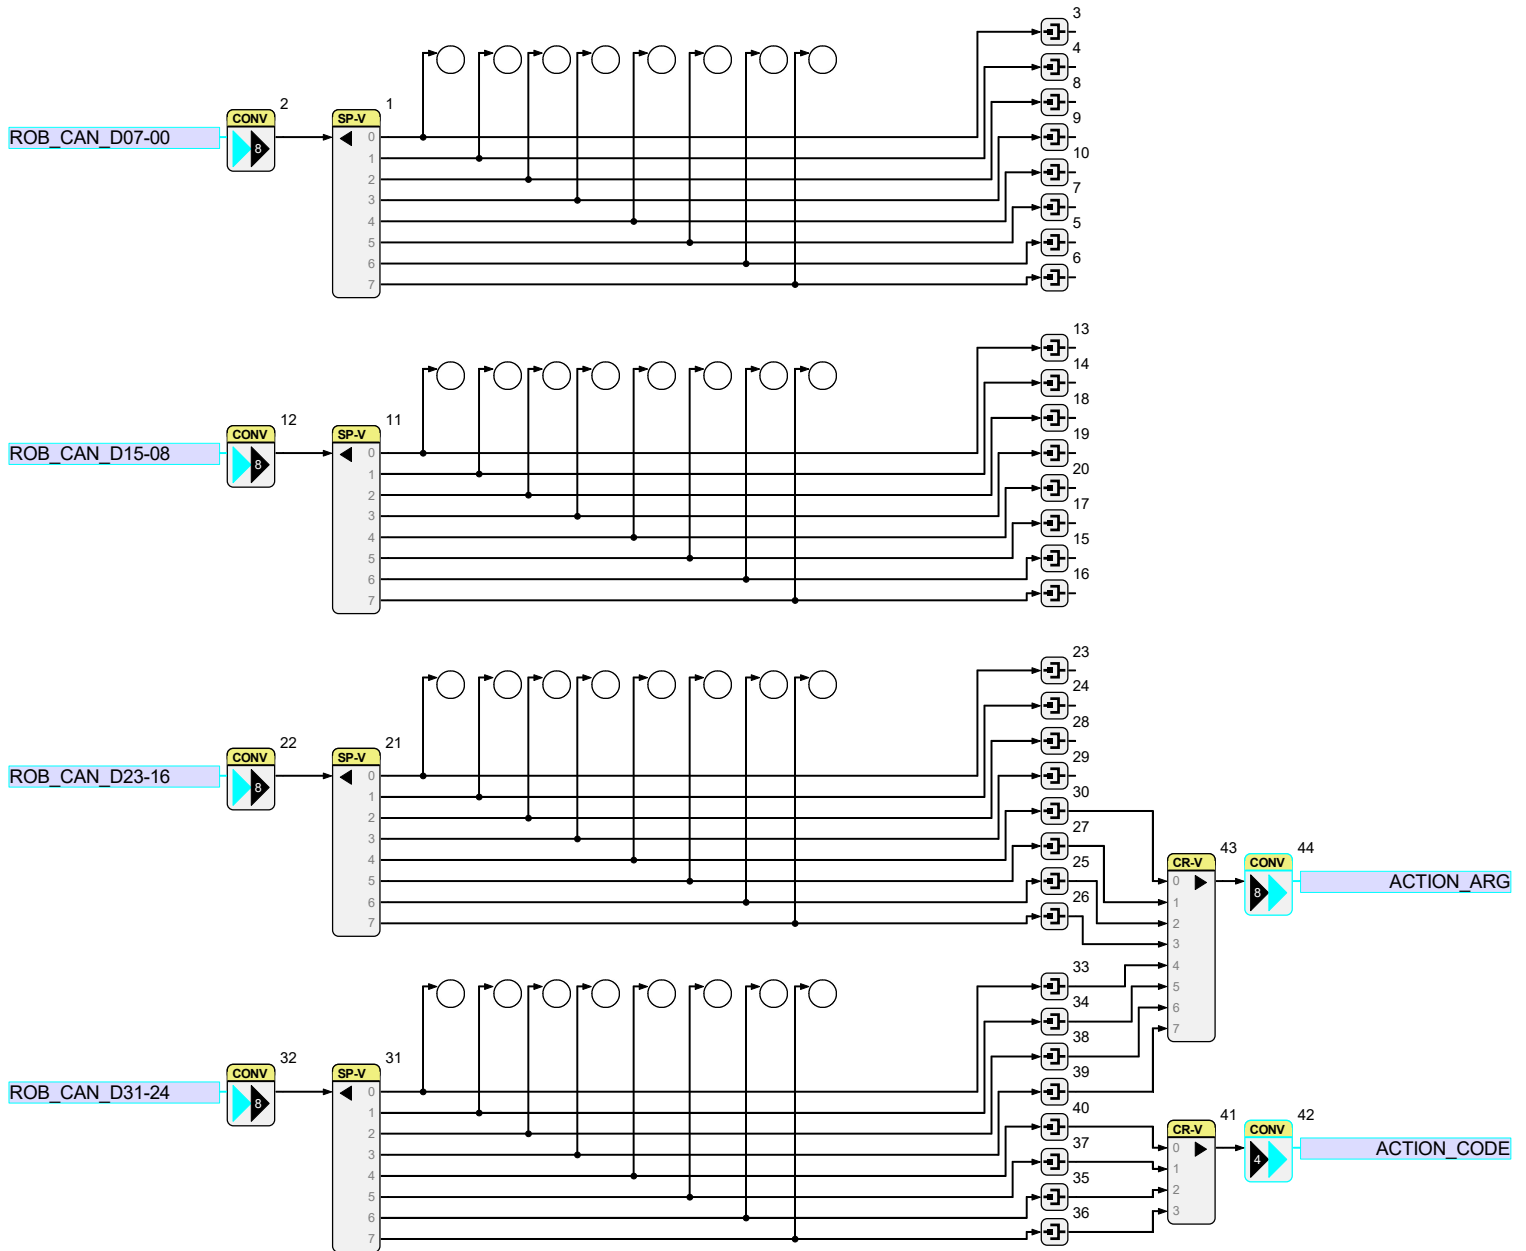


Robotize ApS
 Support@robotize.com
 dk-2800 Kongens Lyngby
 Phone: +45 31 16 80 00
 Fax: +45 31 16 80 00








ROB CAN BITS 32 - 63

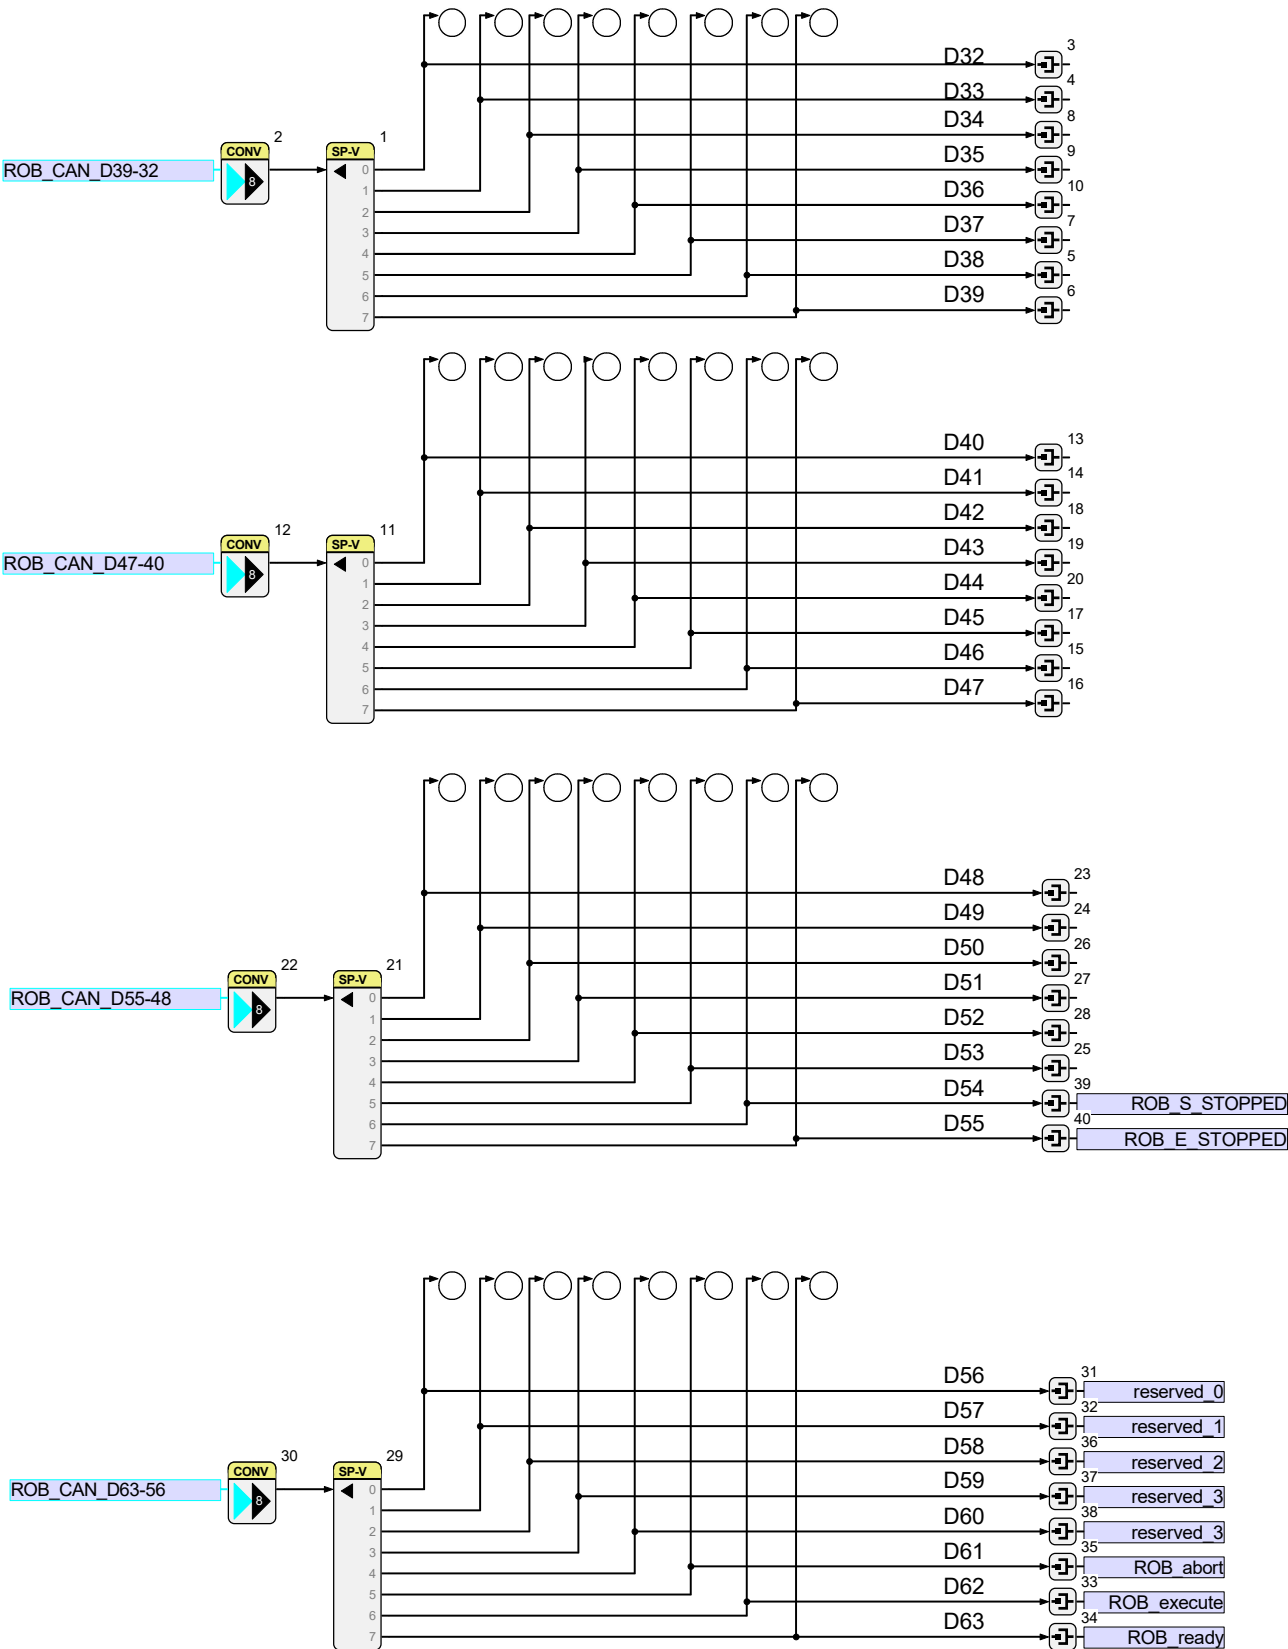

ROB CAN BITS 32 - 63

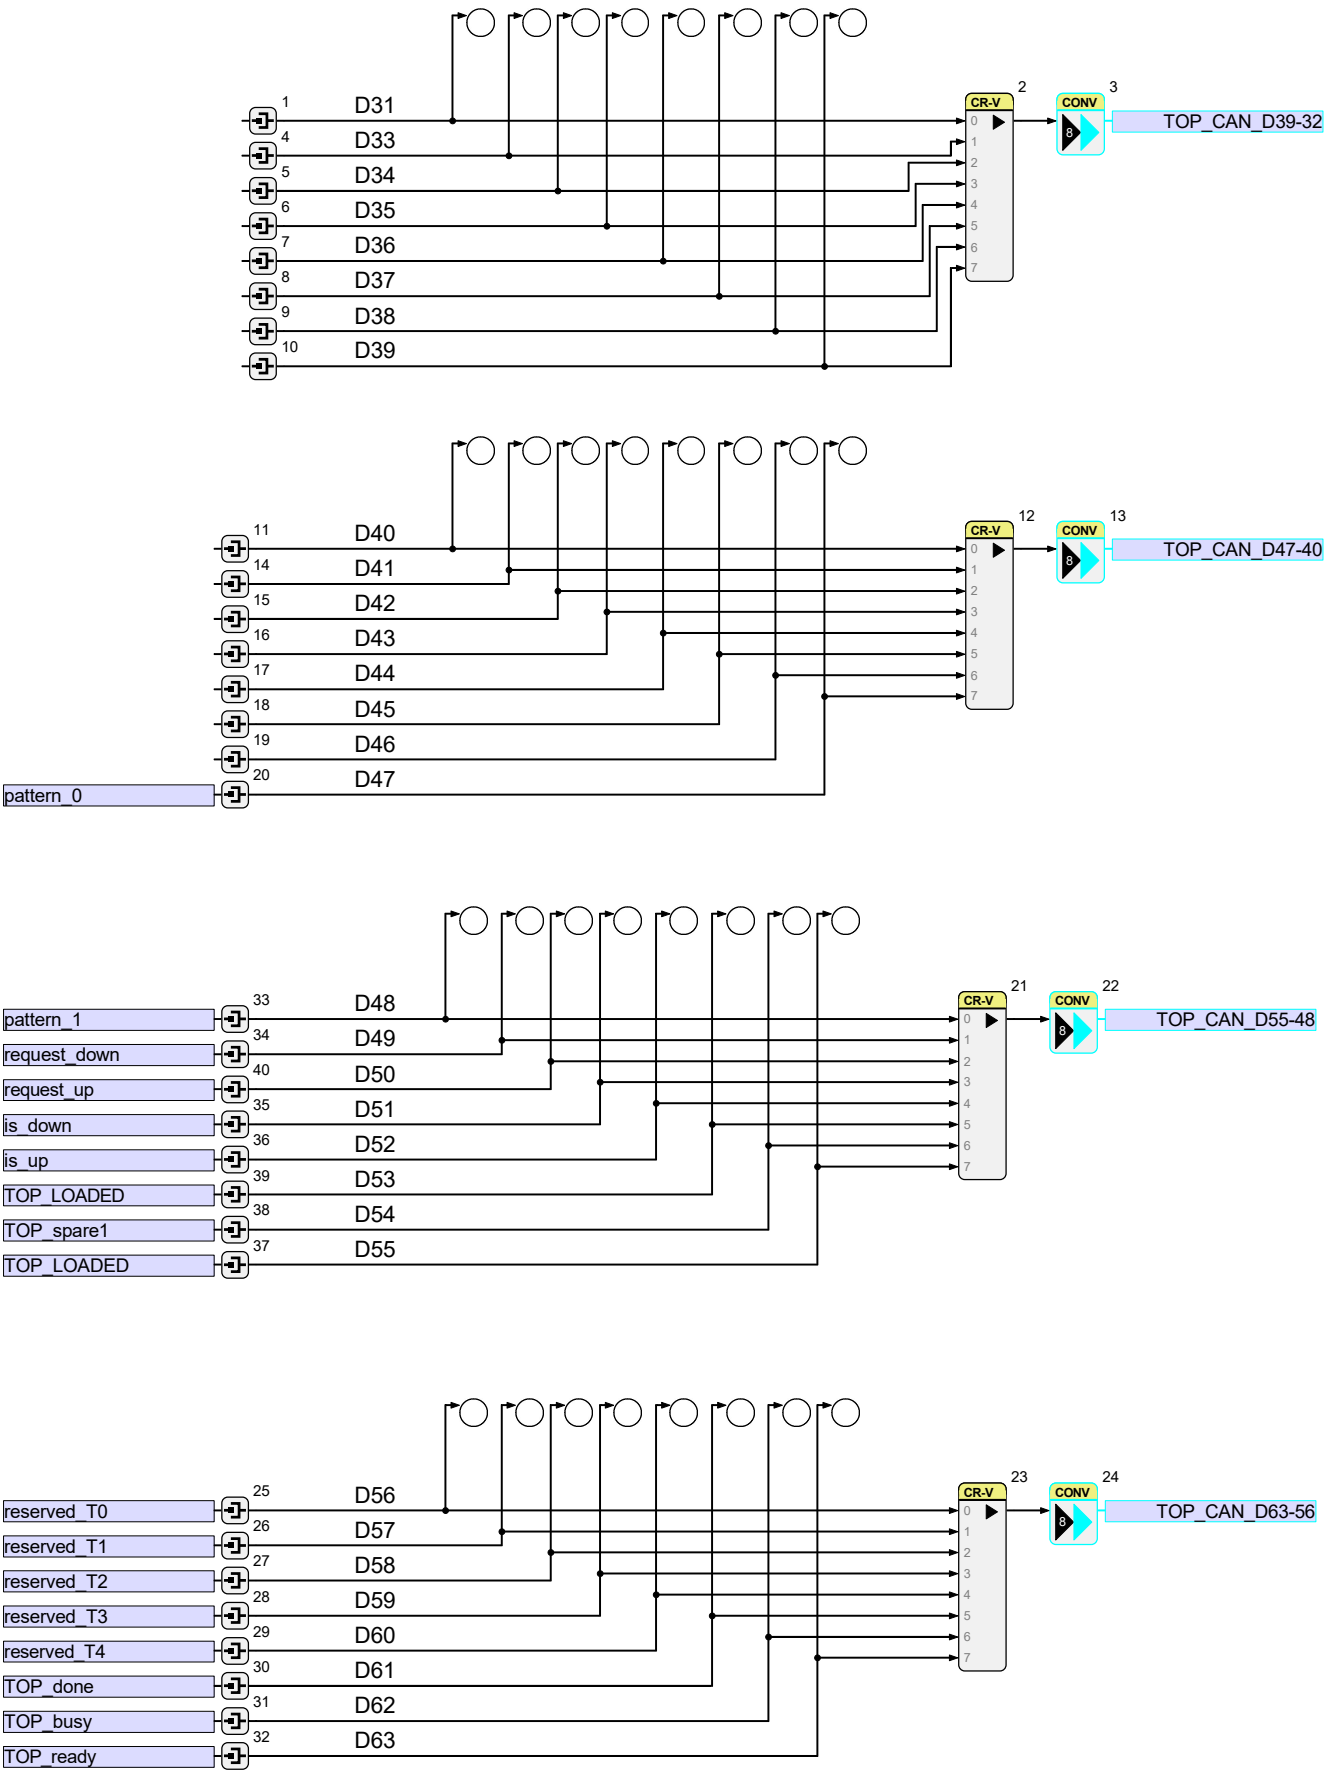


TOP CAN BITS 0 - 31

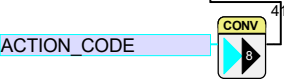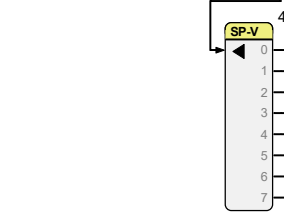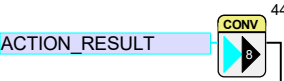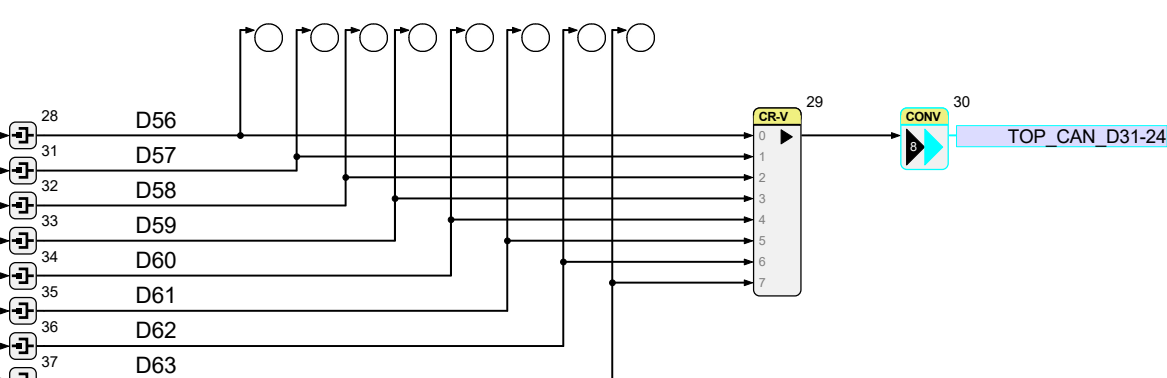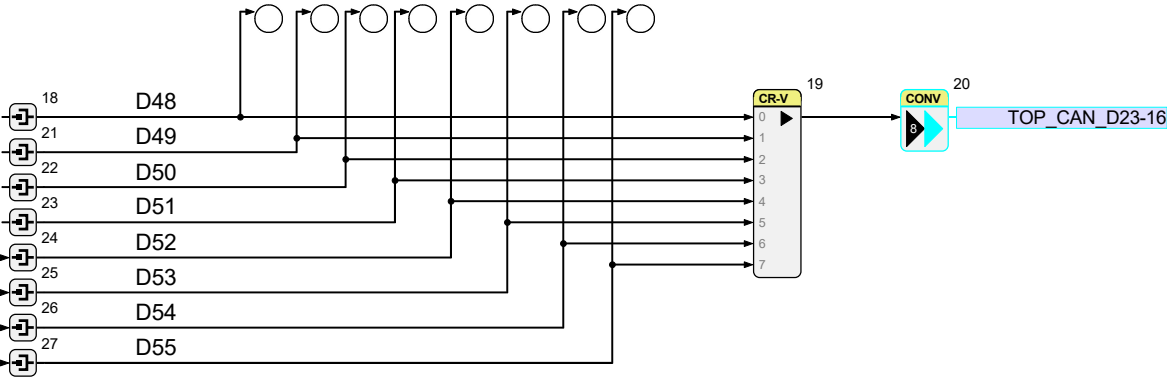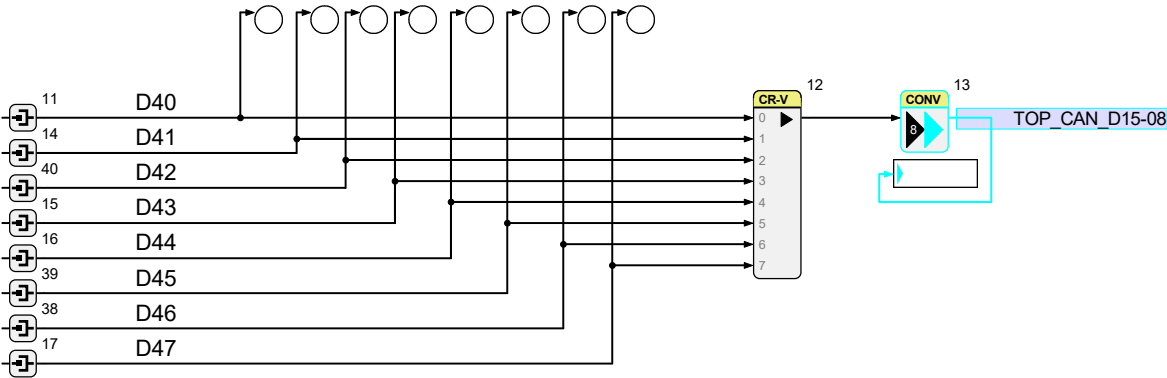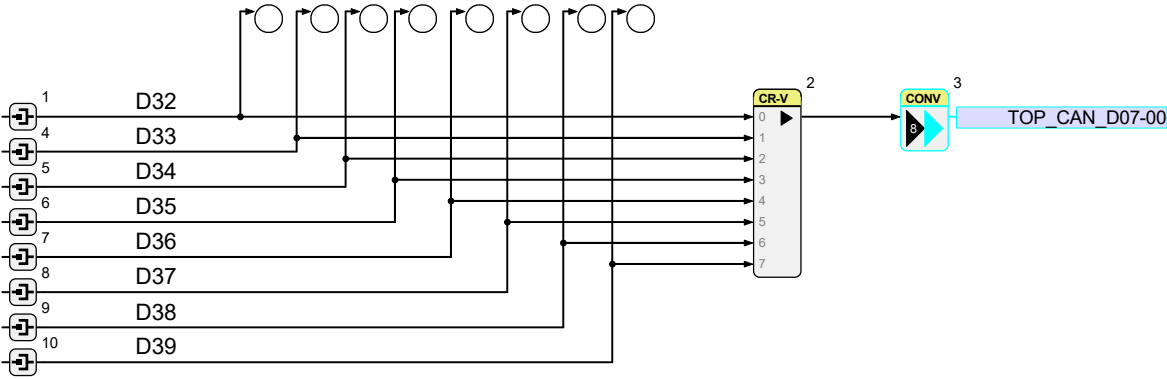


Robotize ApS
Support@robotize.com
dk-2800 Kongens Lyngby
Phone: +45 31 16 80 00
Fax: +45 31 16 80 00

TOP CAN PROTOCOL

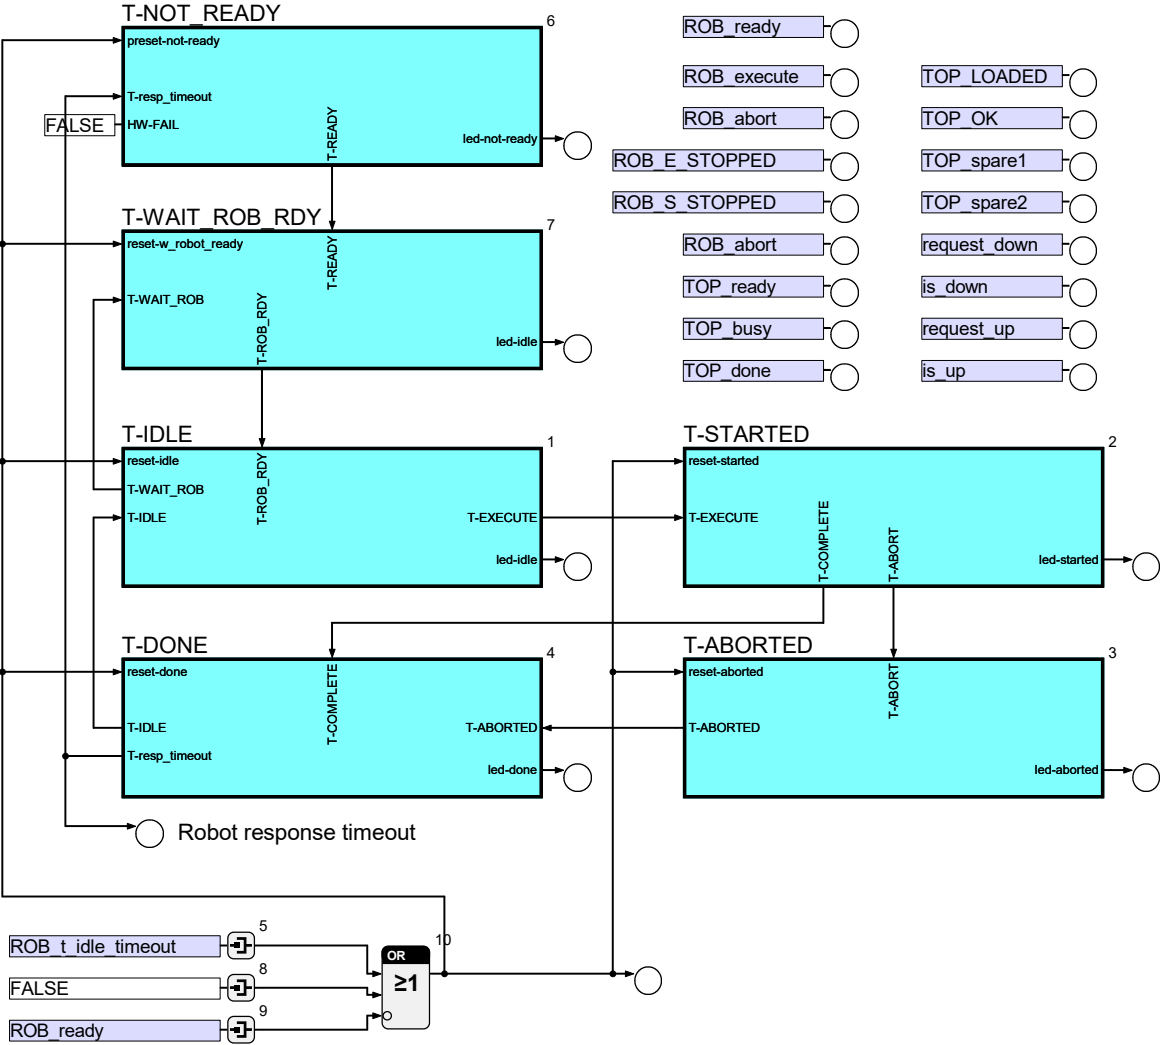

- ROB_ready
- ROB_execute
- ROB_abort
- ROB_E_STOPPED
- ROB_S_STOPPED
- ROB_abort
- TOP_ready
- TOP_busy
- TOP_done
- TOP_LOADED
- TOP_OK
- TOP_spare1
- TOP_spare2
- request_down
- is_down
- request_up
- is_up


STATE TOP IDLE

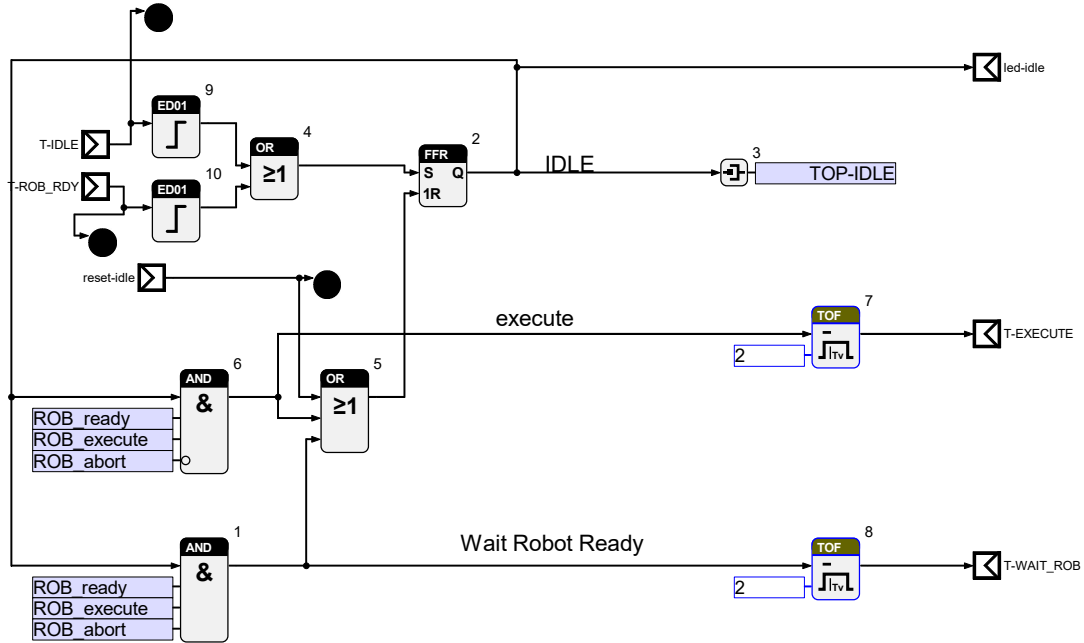

Robotize ApS
 Support@robotize.com
 dk-2800 Kongens Lyngby
 Phone: +45 31 16 80 00
 Fax: +45 31 16 80 00


Project file: ...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL		
Macro: T-IDLE	Version: 1.0	
Date: 01 July 2024	Signed: SvendStave	Inspected:

STATE TOP STARTED

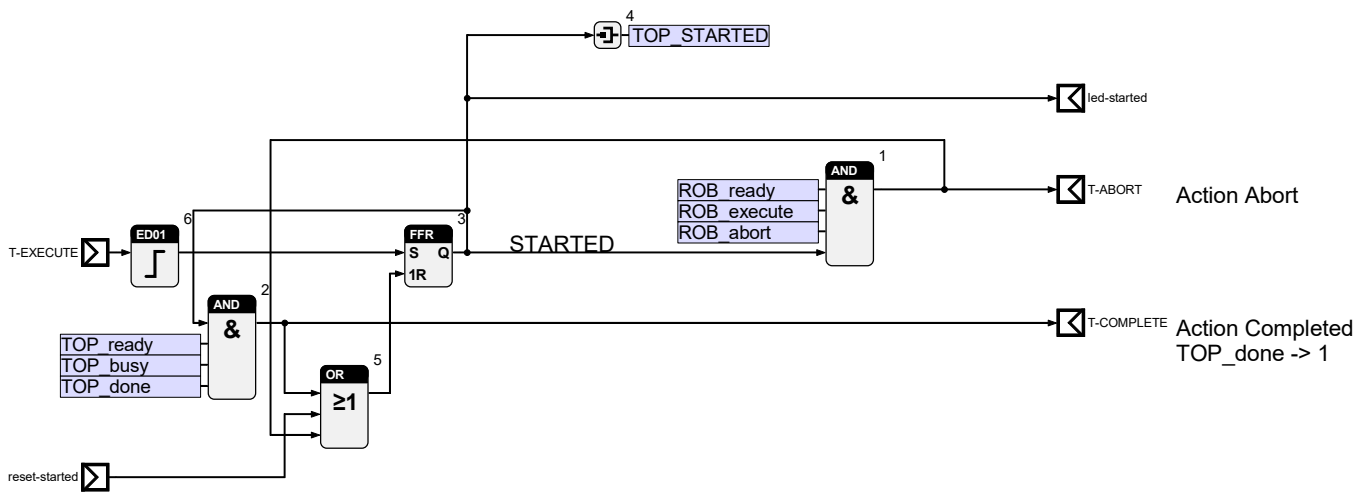


Robotize ApS Support@robotize.com dk-2800 Kongens Lyngby Phone: +45 31 16 80 00 Fax: +45 31 16 80 00		
Project file: ...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL		
Macro: T-STARTED		Version: 1.0
Date: 01 July 2024	Signed: SvendStave	Inspected:

STATE TOP ABORTED

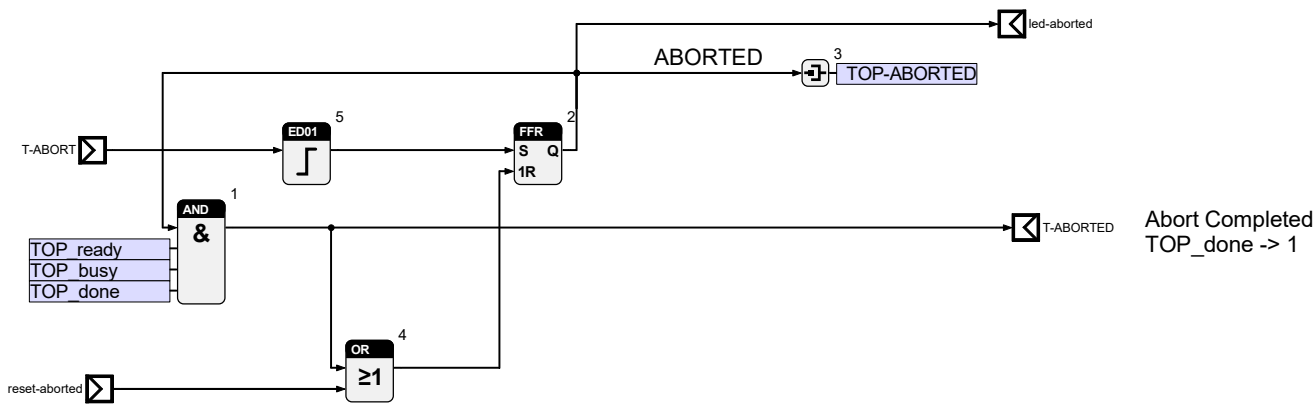

Robotize ApS Support@robotize.com dk-2800 Kongens Lyngby Phone: +45 31 16 80 00 Fax: +45 31 16 80 00		
Project file: ...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL		
Macro: T-ABORTED		Version: 1.0
Date: 01 July 2024	Signed: SvendStave	Inspected:


STATE TOP DONE

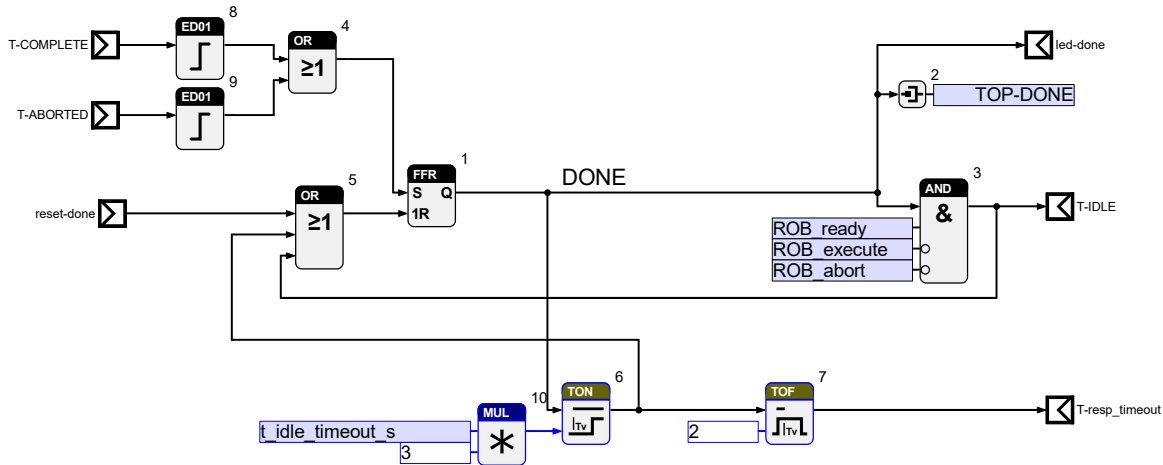

Action done to request clear (TOP_done activated to ROB_execute and ROB_abort deactivated)
[3* t_idle_timeout_s]


Robotize ApS Support@robotize.com dk-2800 Kongens Lyngby Phone: +45 31 16 80 00 Fax: +45 31 16 80 00		
Project file: ...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL		
Macro: T-DONE		Version: 1.0
Date: 01 July 2024	Signed: SvendStave	Inspected:

STATE TOP NOT READY

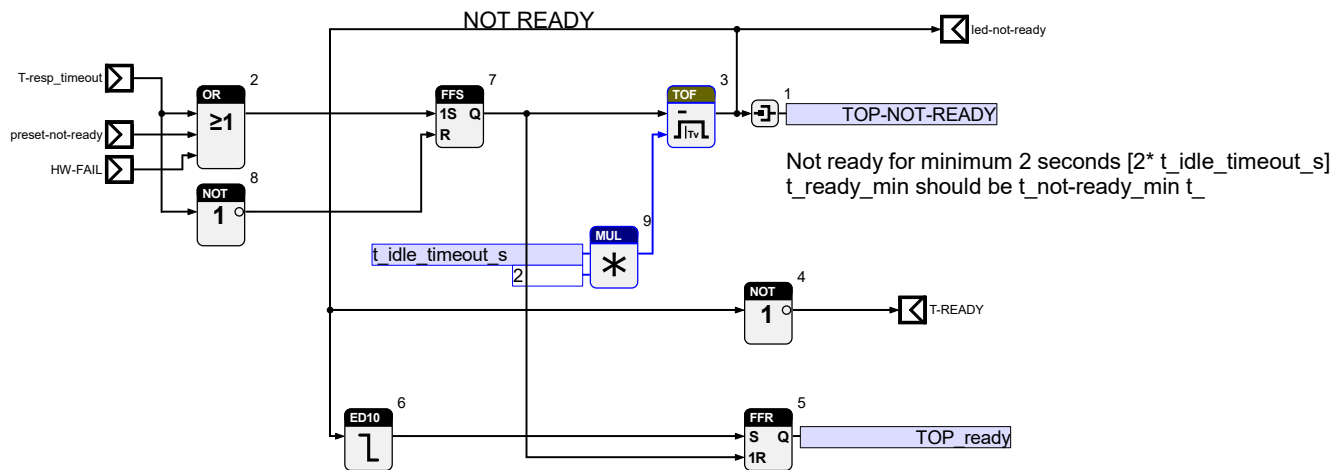


Robotize ApS Support@robotize.com dk-2800 Kongens Lyngby Phone: +45 31 16 80 00 Fax: +45 31 16 80 00		
Project file: ...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL		
Macro: T-NOT_READY		Version: 1.0
Date: 01 July 2024	Signed: SvendStave	Inspected:

STATE TOP WAIT ROBOT READY

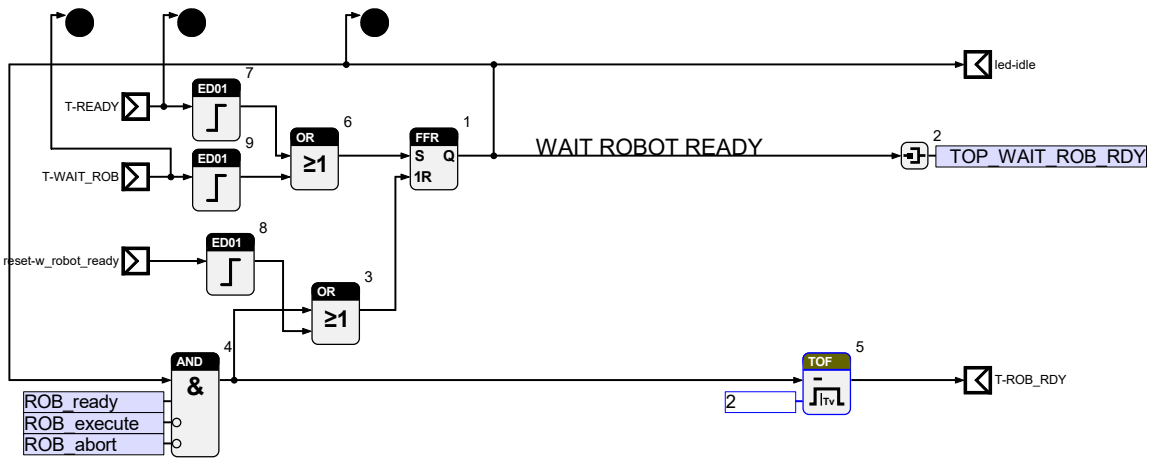

Robotize ApS
Support@robotize.com
dk-2800 Kongens Lyngby
Phone: +45 31 16 80 00
Fax: +45 31 16 80 00


Actions, decode and initiate

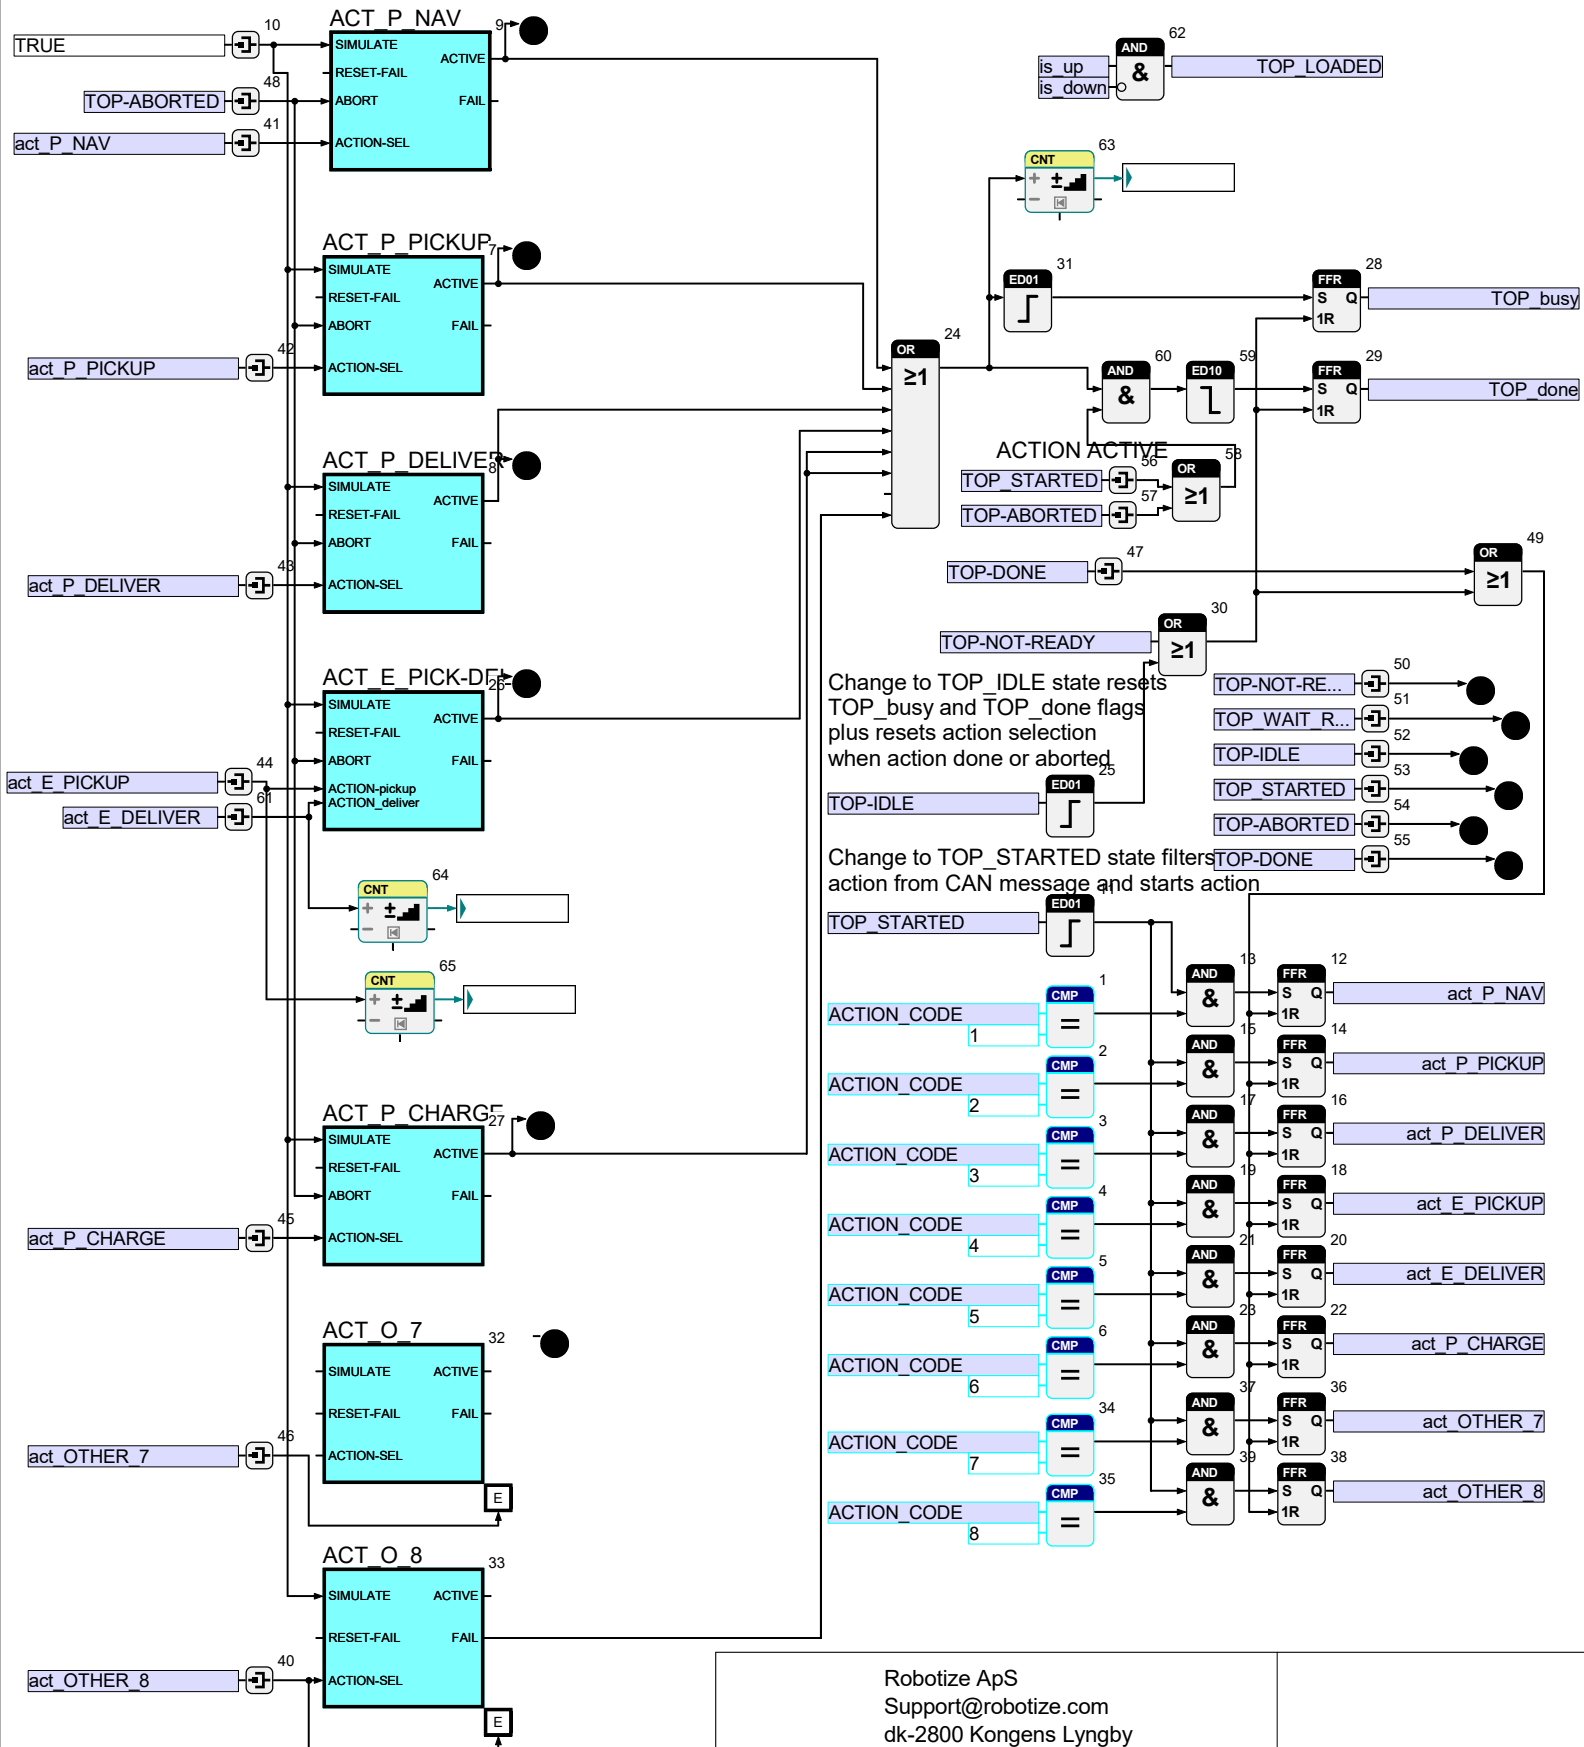

Robotize ApS
Support@robotize.com
dk-2800 Kongens Lyngby
Phone: +45 31 16 80 00
Fax: +45 31 16 80 00


ACTION PREPARE PICKUP

Operation time doing something

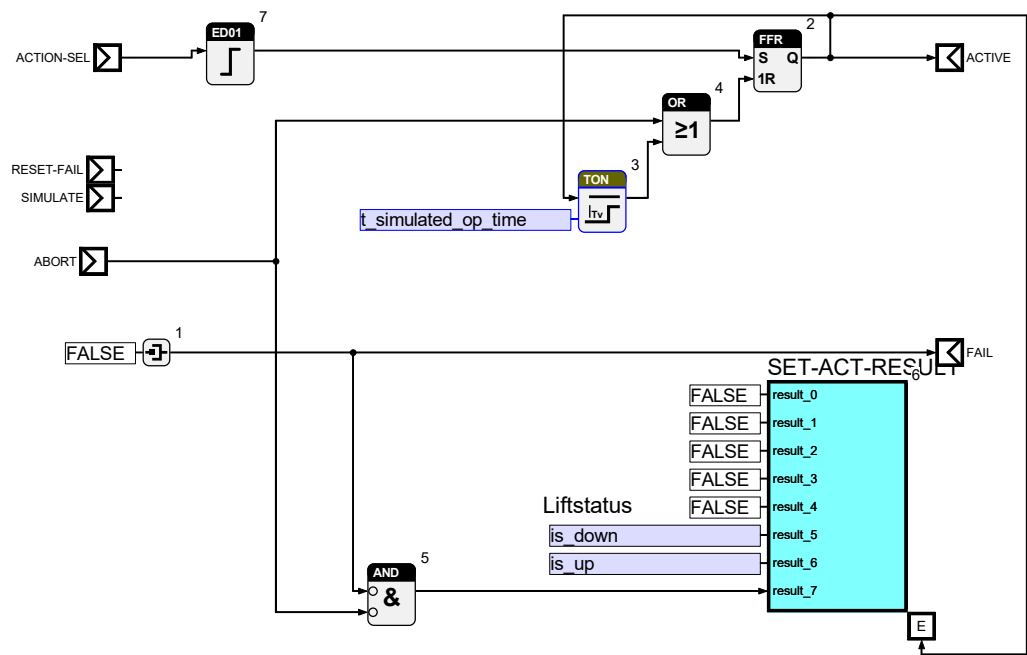

Robotize ApS Support@robotize.com dk-2800 Kongens Lyngby Phone: +45 31 16 80 00 Fax: +45 31 16 80 00		
Project file: ...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL		
Macro: ACT_P_PICKUP		Version: 1.0
Date: 01 July 2024	Signed: SvendStave	Inspected:


ACTION RESULT

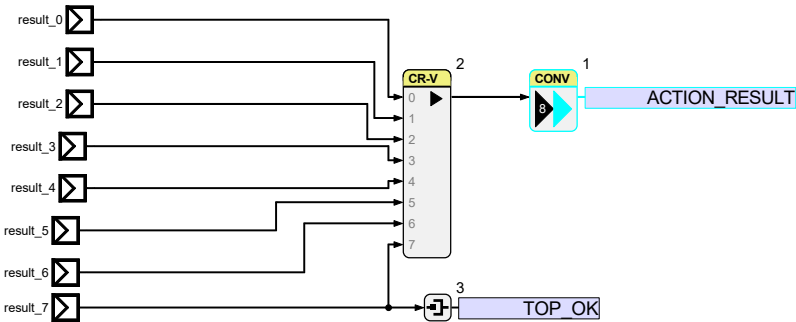

Robotize ApS Support@robotize.com dk-2800 Kongens Lyngby Phone: +45 31 16 80 00 Fax: +45 31 16 80 00		
Project file: ...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL		
Macro: SET-ACT-RESULT		Version: 1.0
Date: 01 July 2024	Signed: SvendStave	Inspected:


ACTION PREPARE DELIVER

Operation time doing something

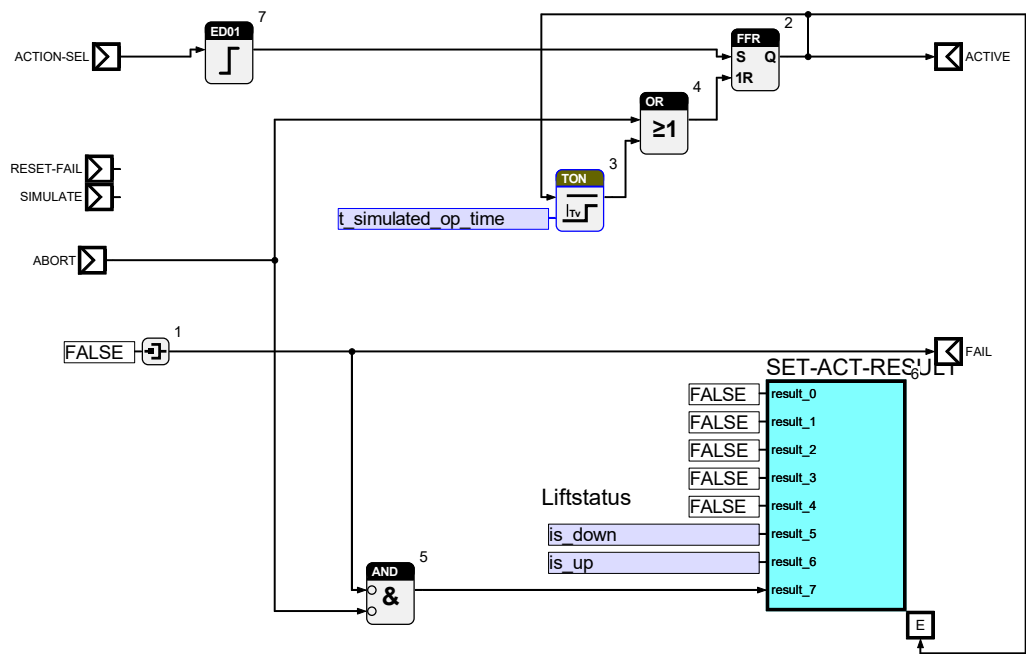

Robotize ApS Support@robotize.com dk-2800 Kongens Lyngby Phone: +45 31 16 80 00 Fax: +45 31 16 80 00			
Project file: ...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL		Version: 1.0	
Macro: ACT_P_DELIVER		Signed: SvendStave	
Date: 01 July 2024		Inspected:	


ACTION RESULT

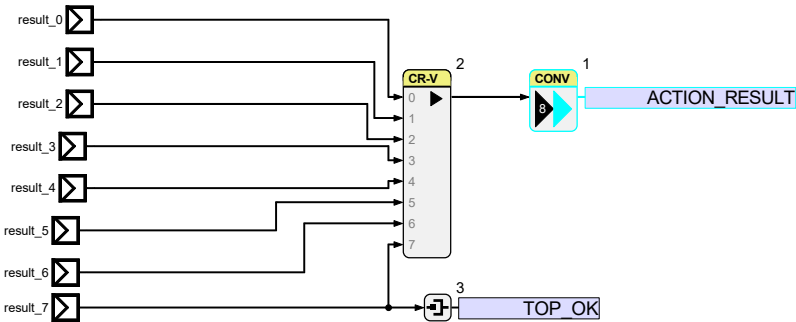

Robotize ApS Support@robotize.com dk-2800 Kongens Lyngby Phone: +45 31 16 80 00 Fax: +45 31 16 80 00		
Project file: ...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL		
Macro: SET-ACT-RESULT		Version: 1.0
Date: 01 July 2024	Signed: SvendStave	Inspected:


ACTION PREP NAV

Operation time doing something

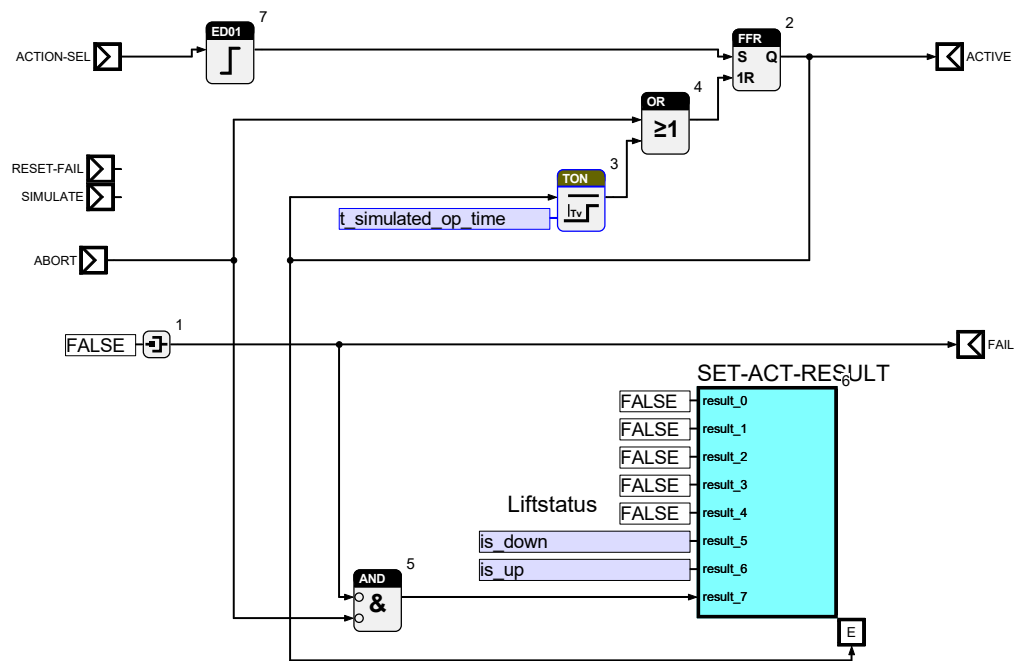


Robotize ApS
Support@robotize.com
dk-2800 Kongens Lyngby
Phone: +45 31 16 80 00
Fax: +45 31 16 80 00

ACTION RESULT

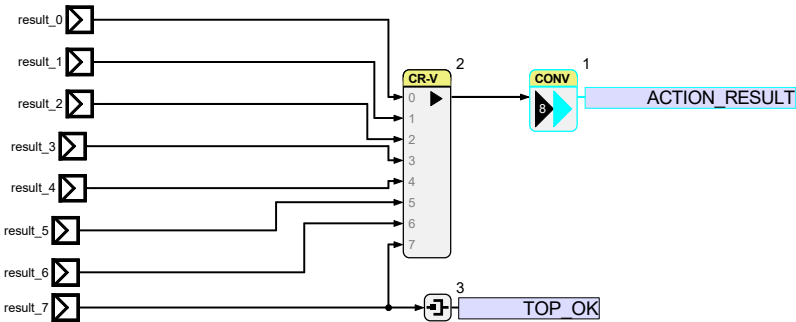


Robotize ApS Support@robotize.com dk-2800 Kongens Lyngby Phone: +45 31 16 80 00 Fax: +45 31 16 80 00		
Project file: ...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL		
Macro: SET-ACT-RESULT		Version: 1.0
Date: 01 July 2024	Signed: SvendStave	Inspected:

ACTION EXECUTE PICKUP or DELIVERY

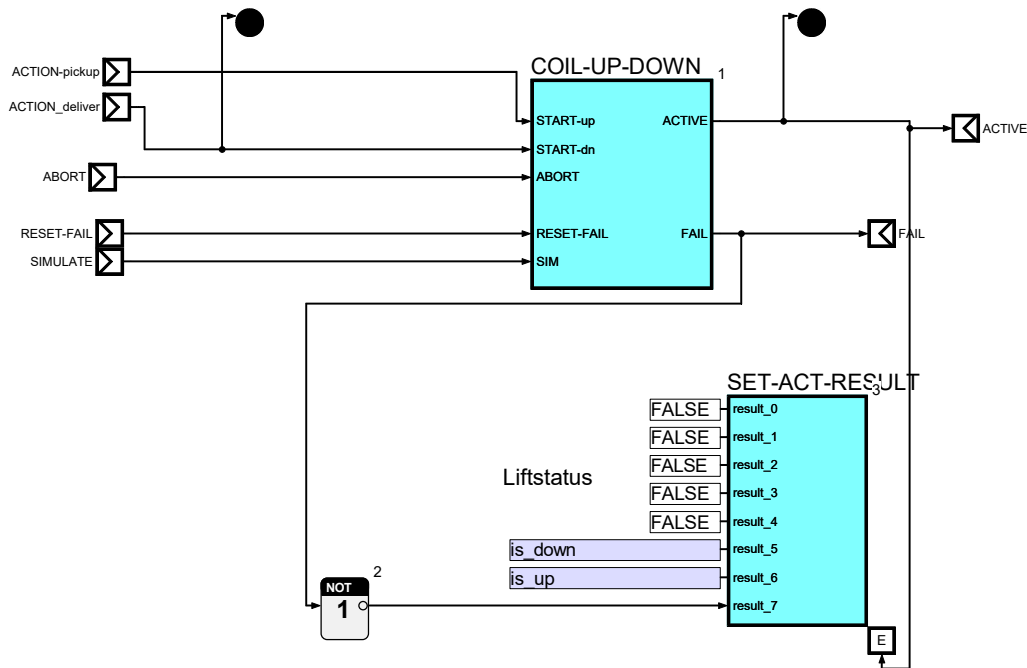

Robotize ApS
Support@robotize.com
dk-2800 Kongens Lyngby
Phone: +45 31 16 80 00
Fax: +45 31 16 80 00

COIL UP / DOWN

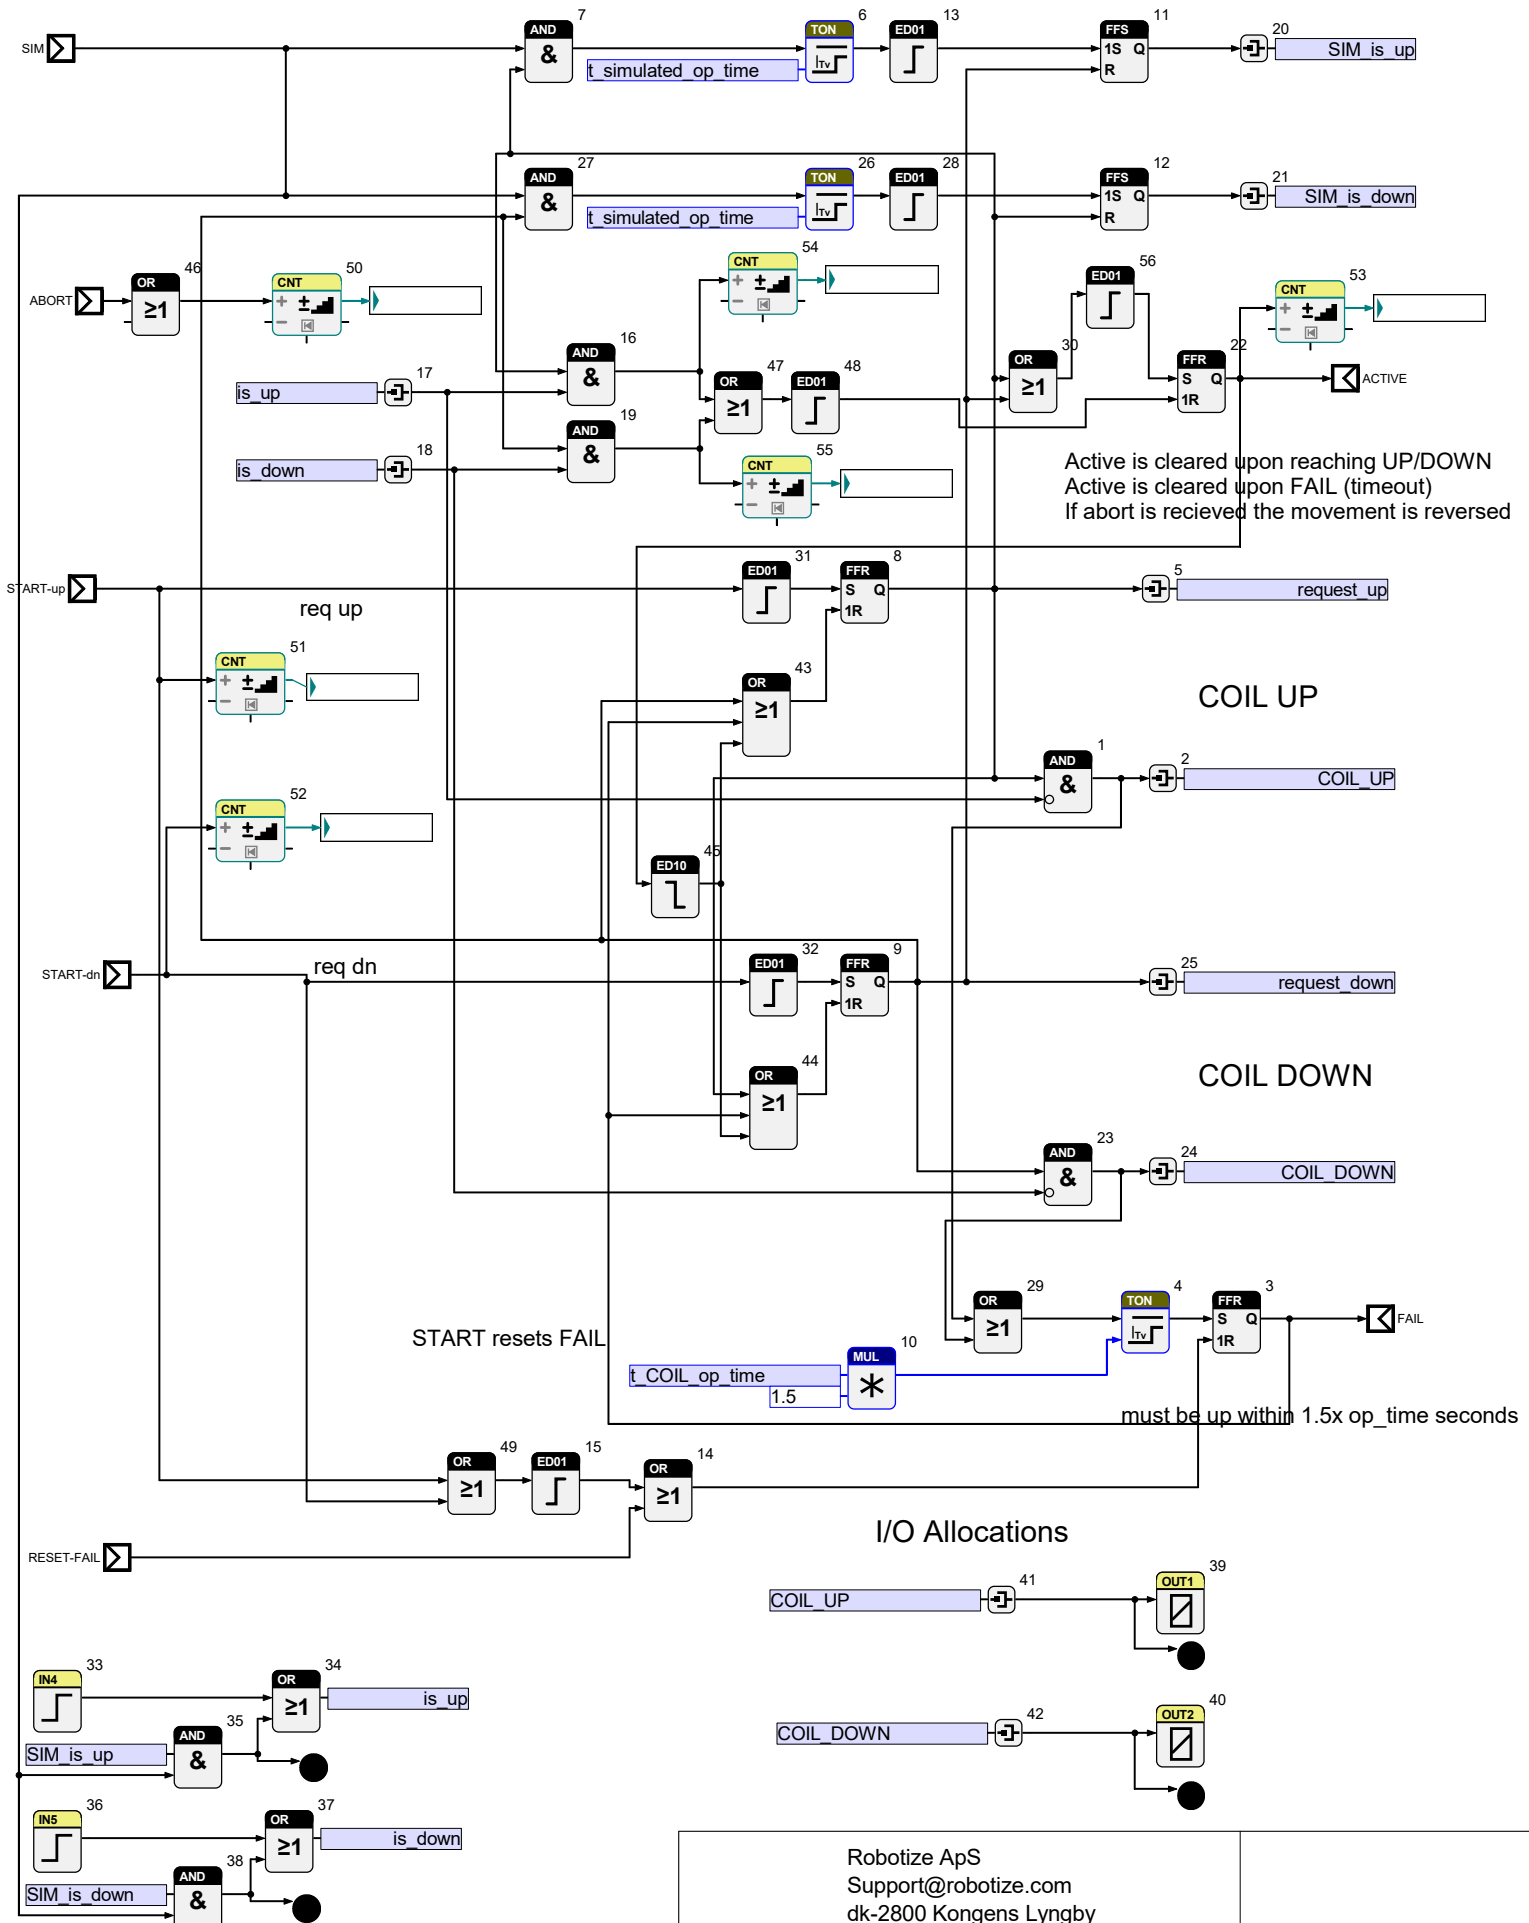

Robotize ApS
Support@robotize.com
dk-2800 Kongens Lyngby
Phone: +45 31 16 80 00
Fax: +45 31 16 80 00

Project file:
...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL

Macro:
COIL-UP-DOWN


Version:

Inspected:	
------------	--

Date: 01 July 2024


Signed: SvendStave

ACTION RESULT

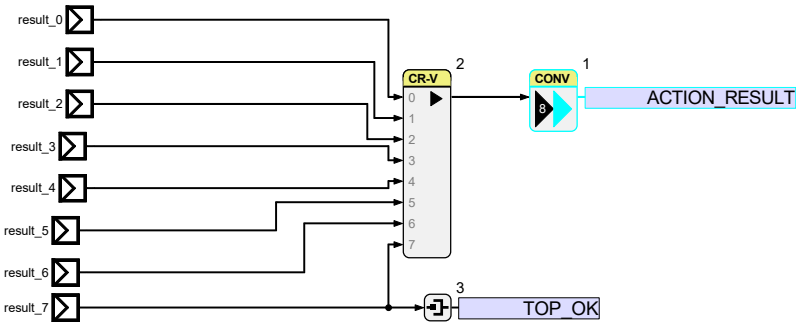


Robotize ApS Support@robotize.com dk-2800 Kongens Lyngby Phone: +45 31 16 80 00 Fax: +45 31 16 80 00		
Project file: ...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL		
Macro: SET-ACT-RESULT		Version: 1.0
Date: 01 July 2024	Signed: SvendStave	Inspected:

ACTION PREPARE CHARGE

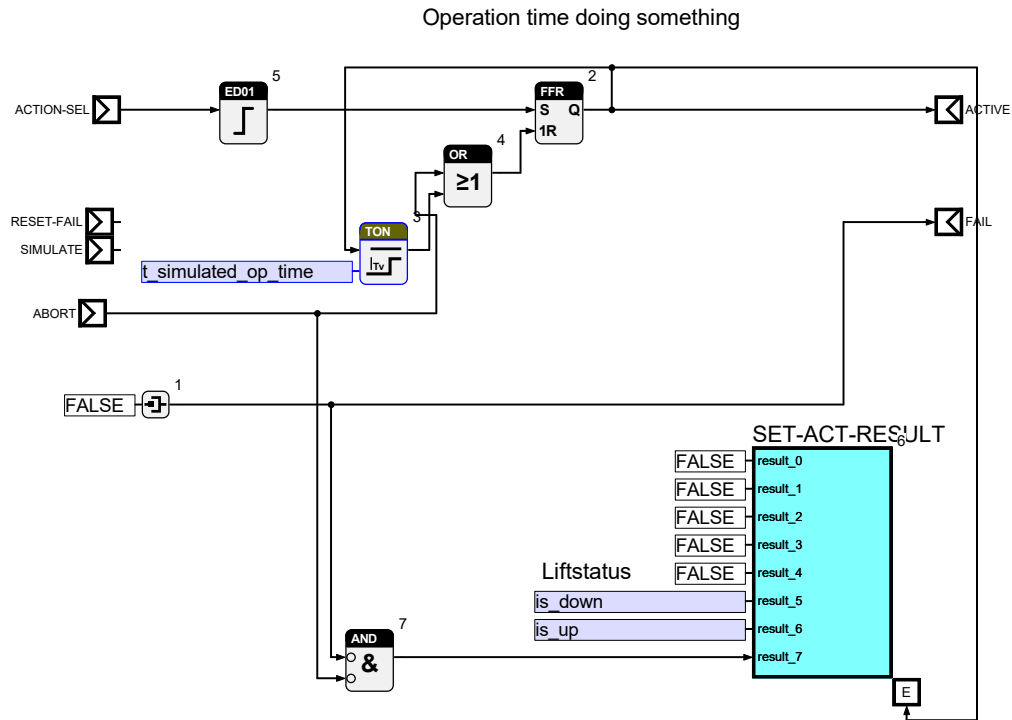


Robotize ApS
Support@robotize.com
dk-2800 Kongens Lyngby
Phone: +45 31 16 80 00
Fax: +45 31 16 80 00

ACTION RESULT

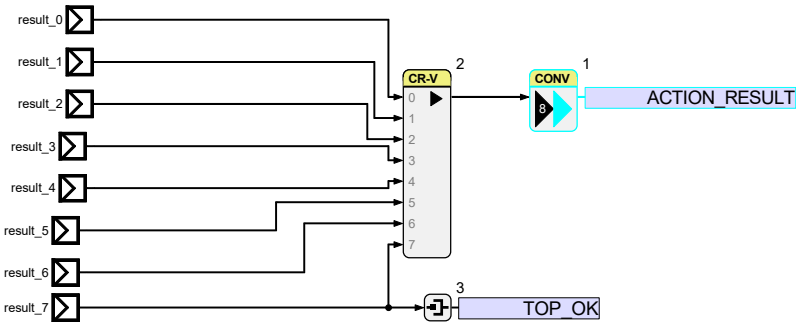


Robotize ApS Support@robotize.com dk-2800 Kongens Lyngby Phone: +45 31 16 80 00 Fax: +45 31 16 80 00		
Project file: ...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL		
Macro: SET-ACT-RESULT		Version: 1.0
Date: 01 July 2024	Signed: SvendStave	Inspected:

ACTION OTHER 7

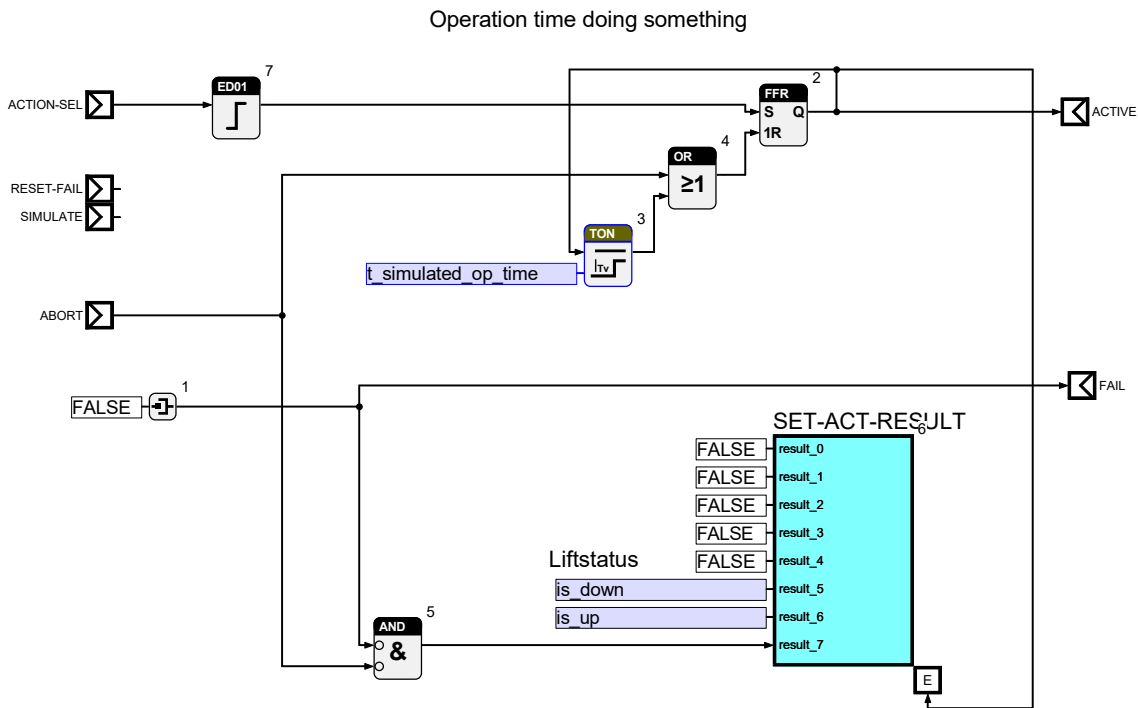


Robotize ApS
Support@robotize.com
dk-2800 Kongens Lyngby
Phone: +45 31 16 80 00
Fax: +45 31 16 80 00

ACTION RESULT

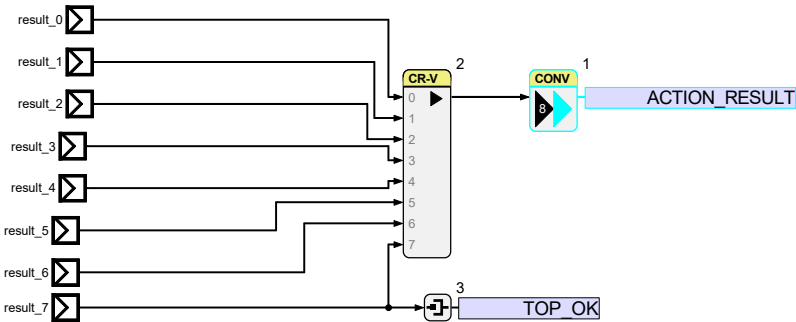


Robotize ApS Support@robotize.com dk-2800 Kongens Lyngby Phone: +45 31 16 80 00 Fax: +45 31 16 80 00		
Project file: ...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL		
Macro: SET-ACT-RESULT		Version: 1.0
Date: 01 July 2024	Signed: SvendStave	Inspected:

ACTION OTHER 8

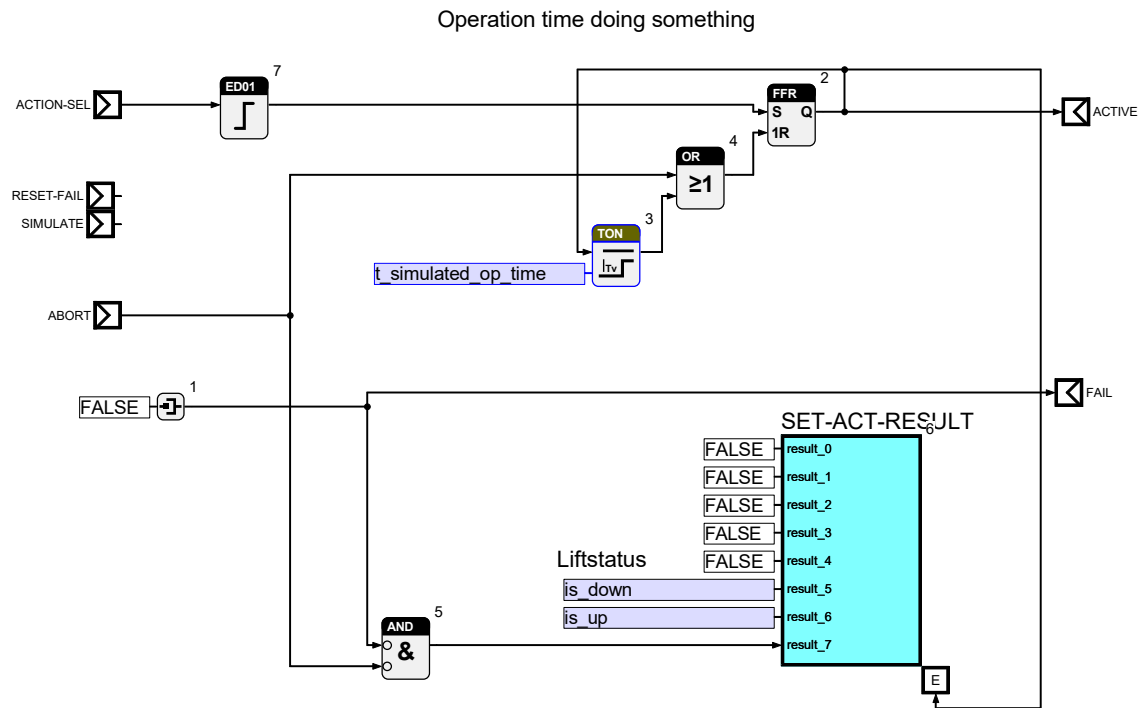

Robotize ApS
Support@robotize.com
dk-2800 Kongens Lyngby
Phone: +45 31 16 80 00
Fax: +45 31 16 80 00

ACTION RESULT

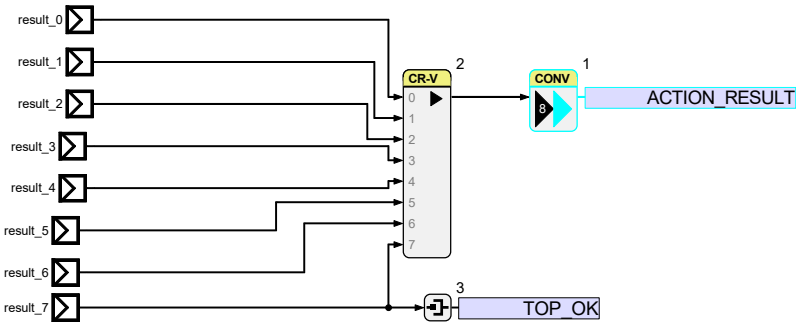

Robotize ApS Support@robotize.com dk-2800 Kongens Lyngby Phone: +45 31 16 80 00 Fax: +45 31 16 80 00		
Project file: ...AVE\DESKTOP\LOCOCUBE\MICON-L\PROJECT\CANDEMO\TOPMODULECAN_V4.MDL		
Macro: SET-ACT-RESULT		Version: 1.0
Date: 01 July 2024	Signed: SvendStave	Inspected: